


Document Camera (Doc Cam)

Instructions for using the Doc Cam
with the podium equipment

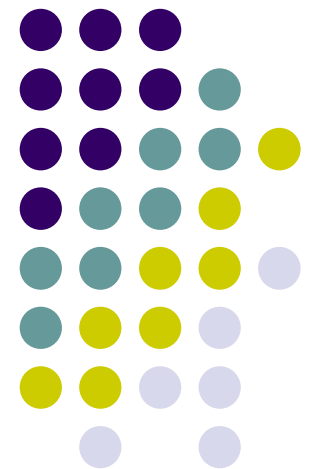

Document Camera



The Document Camera can be used:

- As a document viewer
- As an overhead projector
- To project 3-D objects
- As an Opaque projector





Connecting the equipment

- Verify that the yellow video cable is connected to the video jack on the back of the Doc Cam
- Connect the other end of the video cable to the yellow video port on input “B” of the Radio Shack switch.
- Push the “B” button is Radio Shack switch





Turning on the projector


- Turn on Proxima projector

1. Turn on the remote, the on/off switch is located on the right-hand side of the remote
2. Point the remote at the projector
3. Push the power button. One short beep indicates the projector is powering up



- Turn on NEC projector

1. Point the remote at the projector
2. Push and hold down the power button for 4-5 sec. A single green light on the projector indicates it is powering up.
3. **Note:** Too much light in the room can interfere with the remote. If remote doesn't appear to work, turn off some of the room lights first

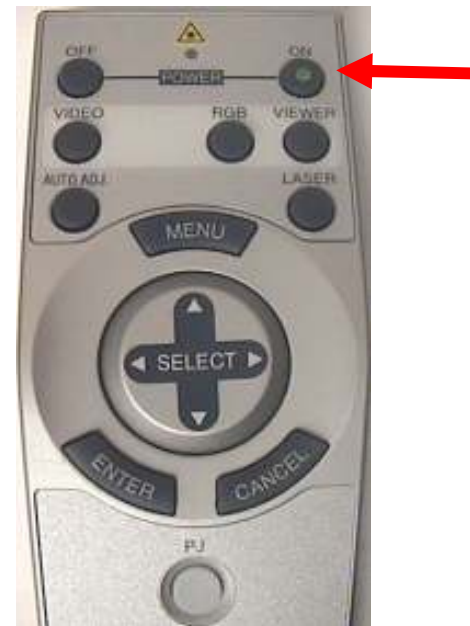

Turning on the projector (cont)



- Turn on Epson projector

1. Turn on the remote, the on/off switch is located on the right-hand side of the remote
2. Point the remote at the projector
3. Push the power button. One short beep indicates the projector is powering up





Turning on the Doc Cam

- Push the power switch is located on the left-hand side of the Doc Cam
 - If all other podium equipment is off (DVD/VCR, Computer) the Doc Cam will automatically display
 - If other podium equipment is on, see the next slide for directions on selecting the Doc Cam as the source to be displayed



Displaying the Doc Cam in a room with a **Proxima** projector



- Point the remote at the front of the projector
- Push the source button. A menu will display on the screen
 - Use the black mouse-ball to scroll up and down to the desired source
 - Composite Video projects the Doc Cam and the DVD/VCR
 - Computer2 Analog projects the computer
 - Push the Select (L) button on the data projector remote to select the desired source
 - **Note:** If all other sources are off (computer, DVD/VCR) the Doc Cam will automatically project



Displaying the Doc Cam in a room with a **NEC** projector



- Point the remote at the front of the projector
 - Push the video button on the remote to project the Doc Cam
 - Push the RGB or Computer1 button to select the computer
- **Note:** If all other sources are off (computer, DVD/VCR) the Doc Cam will automatically project



Displaying the Doc Cam in a room with an **Epson** projector



- Point the remote at the front of the projector
 - Push the video button on the remote to project the Doc Cam
 - Push the Comp1 button to select the computer
- **Note:** If all other sources are off (computer, DVD/VCR) the Doc Cam will automatically project





Using the Doc Cam

- Place an object on the stage
- Adjust the image using the buttons below
 - Lamp – used to turn on/off upper and base lights
 - Zoom – Telephoto and wide angle views
 - Focus – (N) Near and (F) Far, (Auto) Automatic Focus

