

Samsung SDP-850DX Digital Presenter (Document Camera)

Use the REMOTE CONTROL for the following functions:

- **POWER** – Used to turn power on/off
- **LAMP** – Used to turn the head lamp on and off
- **FOCUS (F/N)** - Used to manually focus the image displayed
- **AF** – Used to focus the image automatically
- **RED/BLUE (+/-)** - Used to increase or decrease the red or blue color factor
- **AWC** – used to adjust the screen color (white balance) automatically
- **NEGA/POSI** - Negative (NEGA) to see the negative film. Positive (POSI) to see the general state of positive film
- **FREEZE** – Used to freeze the image on the screen
- **WIDE/TELE** - Used to reduce (Wide) or enlarge (Tele) the image size of an object
- **BRIGHT (+/-)** – Use to make screen brighter or darker
- **PRESET** – Used to save the current status (Zoom, Focus (etc)). Select button (1~4) and press it within 4 seconds after pressing {SAVE/ACTIVE} button.

*******PLEASE DO NOT FORGET TO TURN OFF THE LAMP *******

