


TANDBERG QUICKSET C20 USER INSTRUCTIONS

WAKE UP THE INTERACTIVE VIDEO SYSTEM

1. Turn on the NEC LCD/TV using the NEC remote
2. To make a call you need to **WAKE UP** the system from standby by picking up the Tandberg remote & pressing any key. You may have to point the remote control towards the system to make sure it discovers you.


TO DISPLAY THE COMPUTER

1. Boot up the computer (No Password)
2. Press the **PRESENTATION BUTTON** on the Tandberg remote
3. To remove Picture-in-Picture, push Layout button (see image 03) and select **HIDE SELFVIEW**

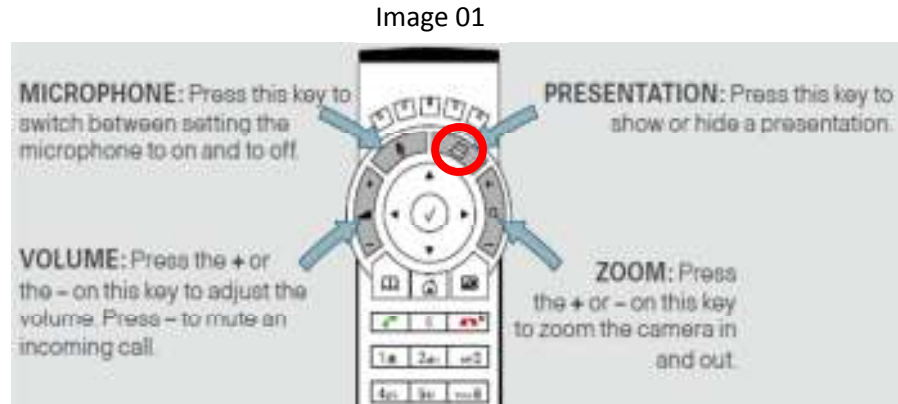

MAKING A CALL USING THE PHONEBOOK

1. Press the **PHONE BOOK KEY** on the Tandberg remote
2. Scroll down to **MY CONTACTS** using down arrow
3. Push the right arrow to view **MY CONTACTS**
4. Scroll to the desired site/number & push the **CONNECT KEY** (Green phone icon)

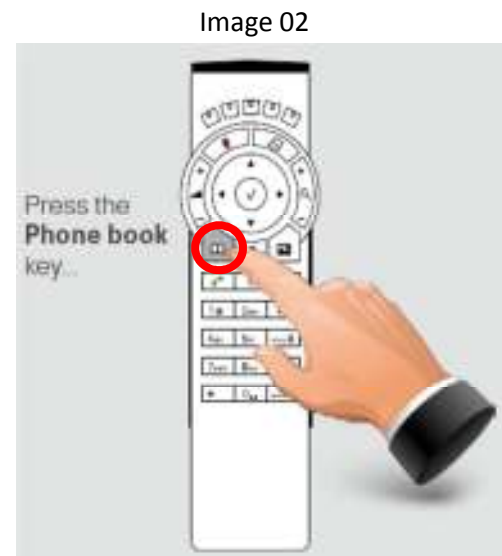

TO CHANGE SCREEN LAYOUT

1. Push the **LAYOUT BUTTON** on the Tandberg remote to scroll to desired layout
2. Push **✓** to select layout

Image 03

TO DISCONNECT

1. Push the **DISCONNECT KEY** (Red phone icon) on the Tandberg remote
2. Turn off the computer (Normal shutdown)
3. Turn off the NEC LCD/TV using the NEC remote

