

## Classroom Podium User Instructions (Used with Epson data projector)



### ➤ TO TURN ON DATA PROJECTOR


- Turn on the Epson data projector remote with the **ON/OFF** switch located on the right-hand side of the remote
- Point remote at data projector and push the **POWER** button. A single low beep indicates the projector is powering up

### ➤ TO USE COMPUTER WITH DATA PROJECTOR

- Power up and log-on to computer (no password needed)
- If unable to Log-on, check the sticker on the computer and verify computer “**USER NAME**” and the “**LOG ON TO**” entries are correct.
- Point the Epson remote at the projector and push the **COMP1** button
- Use the computer speakers on the podium to adjust the **VOLUME**

### ➤ TO USE DVD/VCR PLAYER WITH DATA PROJECTOR


- Power on the player
- Using the Sony remote or the buttons on the front of the player, select **DVD** to play a DVD or **VIDEO** to play a VHS tape
- Push the “**A**” button (labeled **DVD/VCR**) on the RadioShack switch (*Figure 2*)
- Point the Epson remote at the projector and push the **VIDEO** button
- Use the data projector remote to adjust the volume

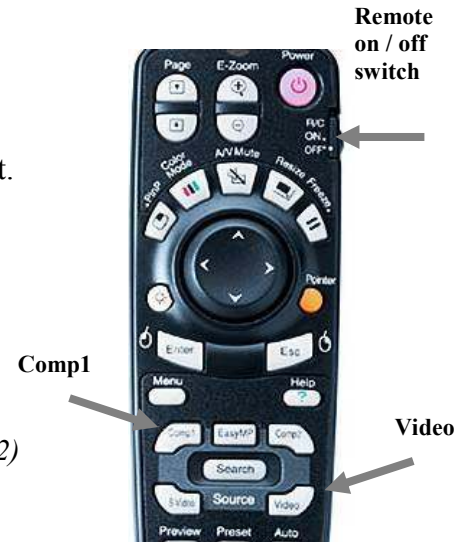


*Figure 1*

### ➤ CONNECTING OTHER VIDEO SOURCES (ELMO, MICROSCOPE, CAMERA, TI-PRESENTER, ETC) TO DATA PROJECTOR

- Plug the yellow video cable from the source into the yellow “input B” video port on the back of the Radio Shack switch (*Figure 3*). For audio, connect the red and white audio cables

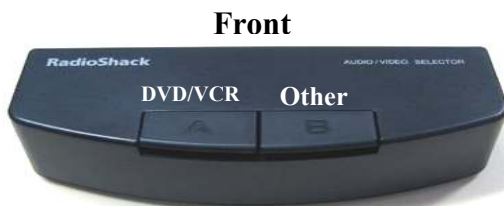

*Figure 2*

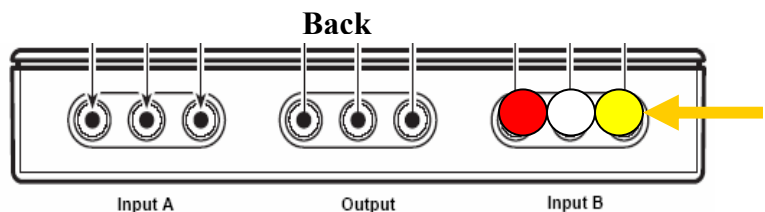

*Figure 3*

- Verify that the “**B**” button (**Other**) on the Radio Shack switch is pressed (*Figure 2*)
- Turn on the video source and the projector
- Point the Epson remote at the projector and push the **VIDEO** button
- Use the data projector remote to adjust the volume

### ➤ TO TURN OFF DATA PROJECTOR

- Point the Epson remote at the projector and push the **POWER** button once to bring up shut down menu
- Push the **POWER** button again to completely turn off the projector

\*\*\*\*\* For further assistance contact Tina Parker (ext. 3089) or Tech Services (834-1000) \*\*\*\*\*