
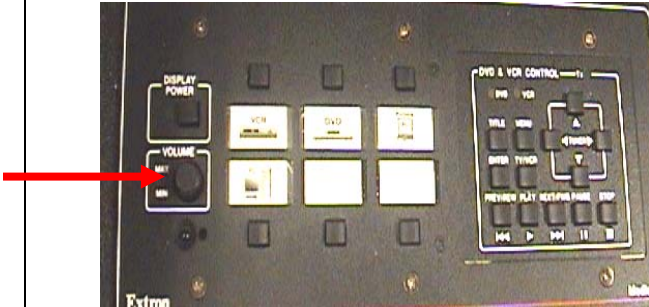



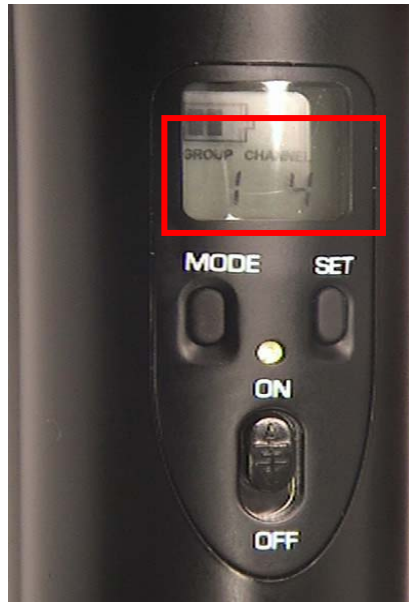
PA Systems
(F1-212, F2-134, LGC-114)

Problems	Suggestions
<p>No sound from the microphones</p>	<ul style="list-style-type: none">▪ Verify devices in the podium and microphones are powered on. <i>F1-212 has an extra audio component that only needs to be turned on if audio is needed in rooms 211 & 213.</i>▪ Verify microphone batteries are good - check battery life image (3 bars = full charge) <div data-bbox="522 478 964 808" data-label="Image">A close-up photograph of a podium control panel. The panel is dark with a small LCD display showing 'GROUP CHANNEL' and a battery level indicator with three bars. A red arrow points to the battery level indicator. Below the display are two buttons labeled 'MODE' and 'SET'.</div> <ul style="list-style-type: none">▪ Adjust the volume control on the podium. <div data-bbox="428 905 1073 1209" data-label="Image">A close-up photograph of a podium control panel. The panel is dark with several buttons and a volume knob. A red arrow points to the volume knob. The volume knob is labeled 'VOLUME' and has 'MUT' and 'MAX' markings. To the right of the volume knob is a 'DVD & VCR CONTROL' section with various buttons.</div> <ul style="list-style-type: none">▪ Adjust the volume on the receiver using the up/down button <div data-bbox="548 1335 1218 1745" data-label="Image">A photograph of a Shure ULA34 receiver unit. The unit is black with two antennas on top. The front panel features a digital display showing '3 4 20' and 'GROUP CHANNEL'. To the right of the display are several buttons, including 'MODE', 'SET', and a volume control knob with up and down arrows. A red arrow points to the volume control knob.</div>

- Adjust the **Gain** on the microphone with a small fat tip screwdriver
 - On the hand-held microphone, twist off the bottom to access gain control
 - On the body pack (lavalier) microphone, the gain control is located on the side




- Verify **Group & Channel** on the Receiver (rack mounted in the podium) and the Microphone are the same, if not, use the **Mode & Set** buttons to change the Group and Channel on the microphone to match the receiver:
 - Push & hold the **MODE** button until the channel number disappears
 - Push the **SET** button to first change the **GROUP** number
 - Push **MODE** again followed by the **SET** button to change the **CHANNEL**
 - Once the channels are set push the **MODE** button. **FrCh** will appear briefly on the display indicating that the settings have been saved




Using Microphone Only

- The main power and display must be activated in order to use the microphone
 - Turn on the podium main power

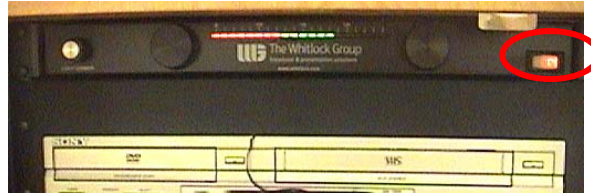

- Push display power button (on podium work area) to activate system.

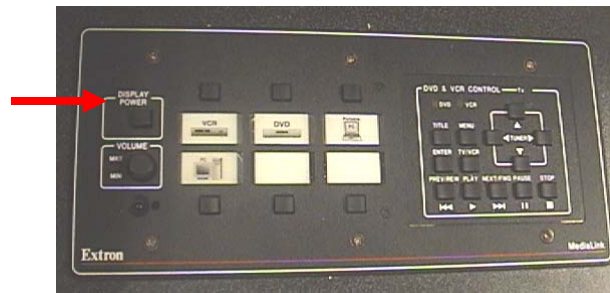

- Power off data projector using NEC remote