



Camcorder Microphone

Use for enhanced audio recording

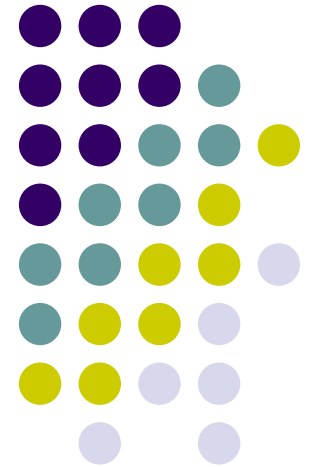

Equipment

- Lavalier microphone with body pack
- Receiver with shoe mount and Monitor earphone
- 1-9volt battery needed for each

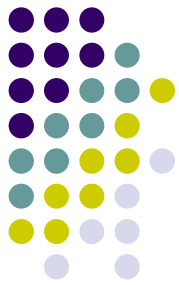

Setting up Microphones




- Insert batteries
 - Slide battery compartment door to open
 - Insert 1-9volt batter in each





Lavalier and Receiver

- Clip on lavalier and body pack
- Slide the shoe mount (on the receiver) on to the camera mount plate
- Plug in the receiver audio cable in to the MIC jack of the camera

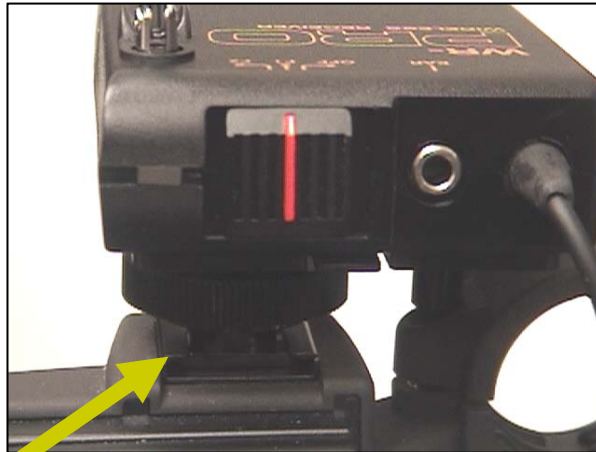



Power / Frequency Switch

- Push the slide switch on transmitter and receiver to the frequency. *Both must be on the same frequency (F1 or F2)*
- Note: When both the Transmitter and receiver are on the LED will remain on. If the LED is not lit, check the batteries





Antenna & Earphone

- Extend the antenna on the Receiver for the best reception
- The earphone can be plugged in to the receiver earphone jack or the camera earphone jack to monitor the sound you are recording

