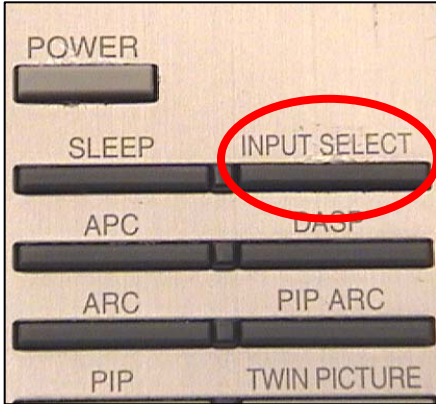


Tandberg 770 MXP (F2-126)

Problems	Suggestions
PC image is not displaying on the plasma	<ul style="list-style-type: none">▪ Wait for the PC to boot up completely▪ Press the Presentation button on the Tandberg remote▪ If no PC image is displayed, resend the laptop signal to the plasma by pressing the FN & CRT/LCD keys on the laptop (may need to repeat this sequence 1-2 times in order to get an image on the laptop as well as the plasma. ***Wait several seconds between tries to see what displays***
Call is connected but no audio	<ul style="list-style-type: none">▪ Verify that the system is not muted. Mute is the yellow button on the Tandberg remote▪ Verify the plasma is on the correct input.<ul style="list-style-type: none">➤ Point the Zenith remote towards the bottom right side of the plasma➤ Push the INPUT SELECT button until “RGB” appears in the top right-hand corner of the display <div style="text-align: center;"><p>The image shows a close-up of the Tandberg remote control buttons. The buttons are arranged in a grid. The buttons are labeled: POWER, SLEEP, INPUT SELECT, APC, DASH, ARC, PIP ARC, PIP, and TWIN PICTURE. The 'INPUT SELECT' button is circled in red.</p></div>